



DRUID CORE & LITE // **T-TYPE SET UP GUIDE**

MAXIMIZING GEAR SHIFTING - T-TYPE SET UP



PREPARATION

Before the transmission can be installed, the chain length and derailleur must be prepared.

CHAIN LENGTH

See the table to find the recommended chain length for your frame size.

CHAIN LENGTH GUIDE

FRAME SIZE	SET UP KEY	SET UP COG	CHAIN LENGTH No Lower Guide Required	CR. SIZE	MAX CR. SIZE
S1	A	6	120 LINKS	34T	36T
S2	A	6	122 LINKS	34T	36T
S3	A	6	124 LINKS	34T	38T
S4	A	6	126 LINKS	36T	38T

SRAM’s T-Type transmission requires a specified setup procedure based on chain length and derailleur configuration. This setup does away with the need for b-tension adjustments.

NOTE – SRAM T-Type is only compatible with frames equipped with SRAM’s Universal Derailleur Hanger (UDH) fitment.

MAXIMIZING GEAR SHIFTING - T-TYPE SET UP



STEP-BY-STEP

For the full Eagle Transmission setup guides, please scan or follow the links below:



Follow this [link](#) for AXS
T-type Setup



Follow this [link](#) for
Mechanical T-type Setup